

1

Choose a proper impact tool.

35-485  
110 Tool




35-480  
LSA




2


### Cable preparation

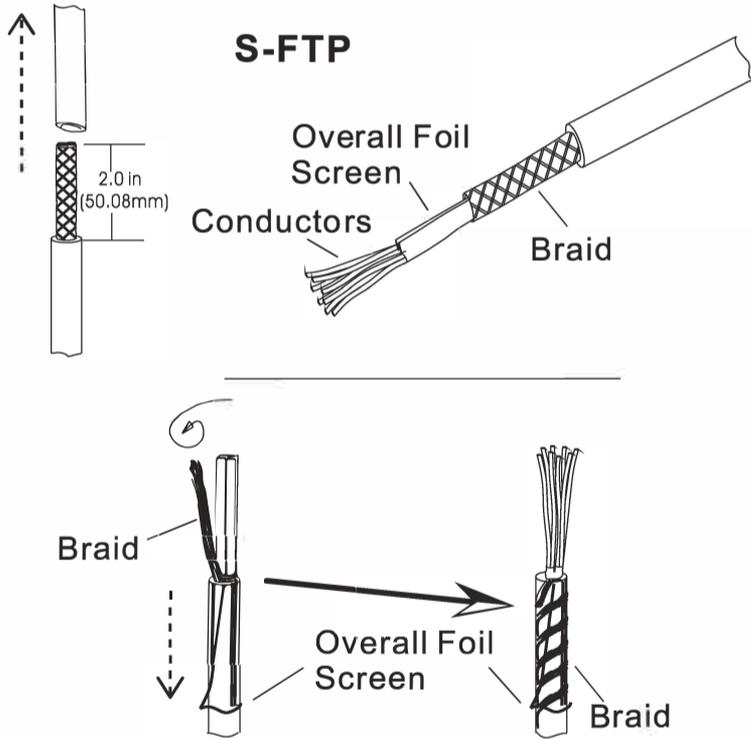

4

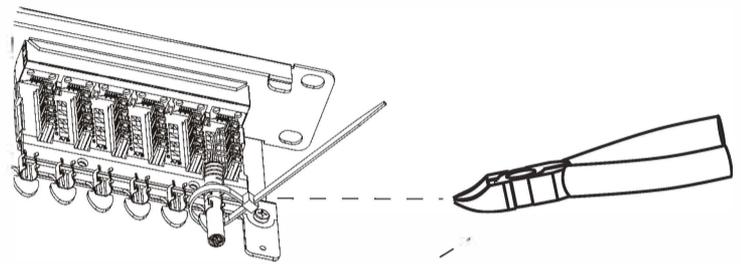


Use Cable Tie to Secure Rear Clip!

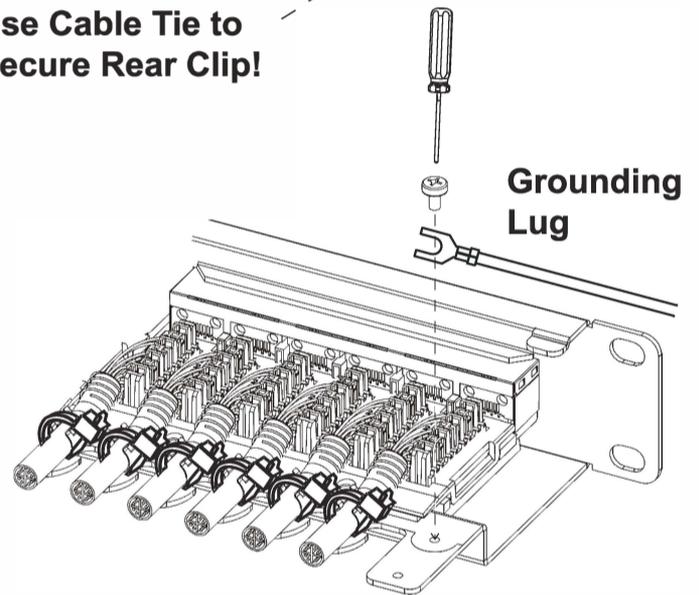

Tightening the ground lug with screw.

3

### Termination

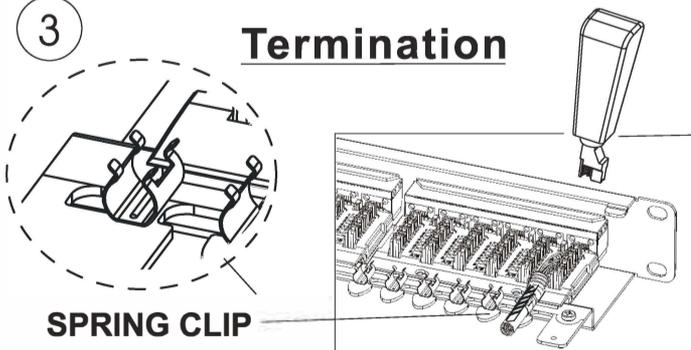

Make Sure the Braid/Foil were Secure with Rear Clip.

Tightening Shield Cap with 2-Side Screws.

